

# INSTRUCTION MANUAL

## ELECTRICAL GRIDDLE - MODEL GR3E-200001-A4

-**PLEASE** read these instructions carefully before operating this appliance.  
-The temperature is thermostatically controlled between the range of 50°C to 300°C (122°F to 572°F). A signal lamp adjacent to the thermostat indicates when heating element is energized.

### IMPORTANT

-This unit is designed to operate on alternative current (A.C.) only.  
-**DO NOT CONNECT TO DIRECT CURRENT (D.C.)**  
-Care should be taken when operating this appliance as **HOT SURFACES** may cause burns.  
-Ensure that the power supply cord does not come into contact with hot surfaces.  
-Do not leave unit in operation without an attendant.  
-When not in use for long period unplug the appliance.

### INSTALLATION AND OPERATION

-Check if voltage of your power system corresponds to the same specified on the appliance label.  
-Before using the appliance for the first time, remove the protection coating (MEDICINAL VASELINE) with a damp cloth and turn the control knob to 300°C (572°F), allow griddle to heat for +/- 30 minutes. You will notice some smoke appearing due to the protection coating and internal insulation burning, which is normal.  
-After 30 minutes heating, turn temperature control down to operating desired temperature and grease plate, generously with butter or oil. Never allow excess of fat or oil to buildup as this will result in build-up of carbon on the plates, which should be removed with a scraper.  
-Appliance is provided with grease drawer that receives grease and food scraped residues.  
-This appliance should be preheated before daily operation. Always allow 15 minutes preheat time before loading griddle with food to give griddle surface time to saturate.  
-To turn off your appliance turn thermostat knob completely towards left.

### CLEANING PROCEDURE

-Always ensure that the appliance is disconnected from the main power supply before cleaning.  
-Try to scrape as much grease and residues from cooking surface as possible while the unit is still hot.  
-After appliance has cooled, clean cooking surface and body using only a damp cloth. Never use water jet or immerse appliance in water.  
-Wipe off appliance with a dry cloth and wait at least half an hour before re-connecting to main power outlet.

# CROYDON



# GR3E


## CROYDON

**CROYDONMAQ INDUSTRIAL LTDA.**  
Estrada São Lourenço, 891 - Capivari - Duque de Caxias.  
RJ - Brasil - CEP 25243-150 Fax: 55 21 2676-2522  
Phone: 55 21 2776-1928 / 55 21 2676-1512  
e-mail: [croydon@croydon.com.br](mailto:croydon@croydon.com.br)

GR3E-200001-A4




# ELECTRICAL GRIDDLE (GR3E)

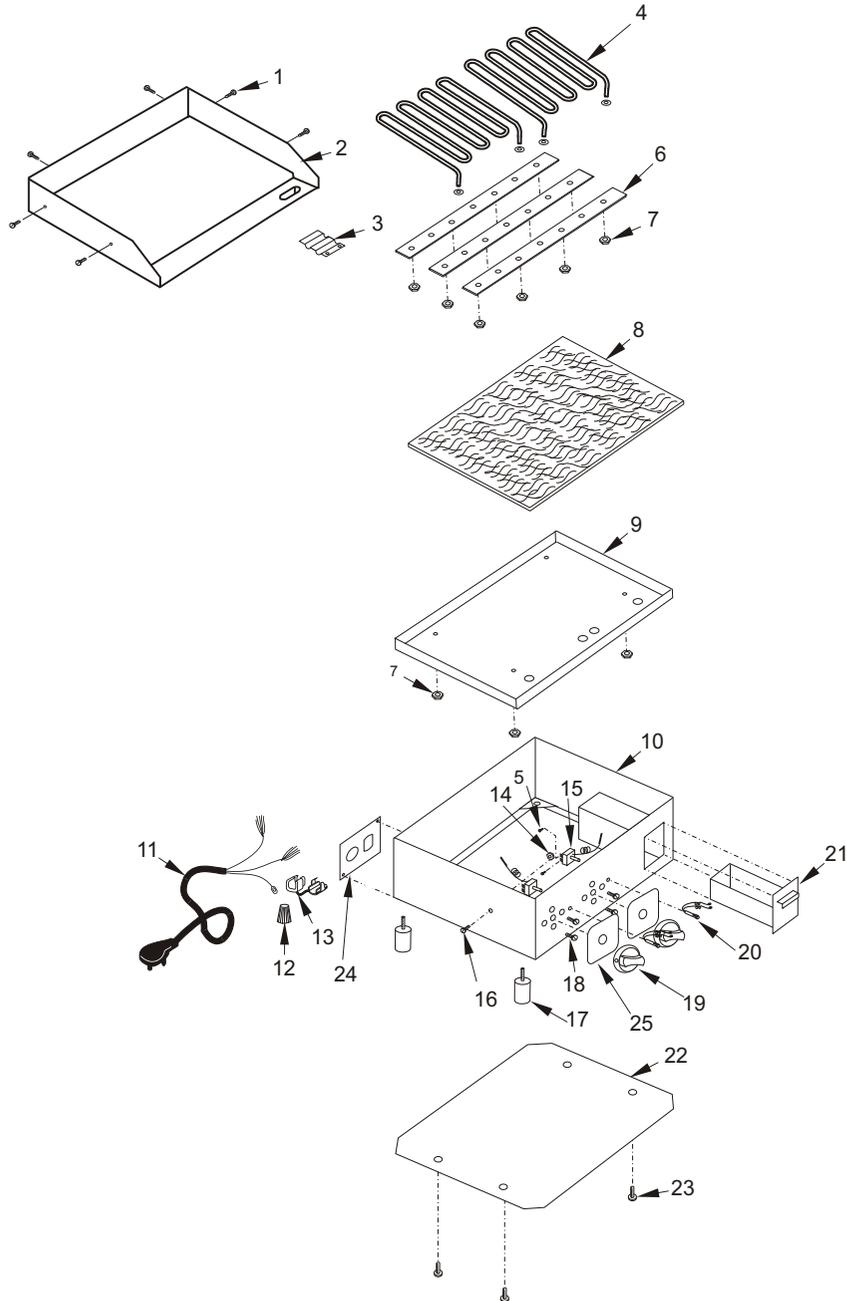

# ELECTRICAL GRIDDLE (GR3E)

Item	Code	Description
1	557	Screw (4,8)
2	2.557-3	Cooking Plate
3	2.065-3	Thermostat Bulb Retainer
4	2.935-3	Heating Element (1900W)
5	330	Screw
6	2.924-3	Heating Element Support
7	635	Nut (1/4")
8	3.706-3	Insulation
9	2.943-3	Heating Plate Protection
10	18.040-3	Body
11	2.093-3	Cord Connection
12	2.066-3	Wire Connector
13	9.413-3	Cord Retainer
14	604	Nut (3/16")
15	2.009-3	Thermostat
16	385	Screw (3/16")
17	1.918-3	Foot
18	329	Screw
19	2.009-B	Knob
20	3.509-3	Pilot Light
21	3.506-3	Grease Drawer
22	18.035-3	Bottom Cover Plate
23	552	Screw (3,5)
24	2.805-3	Retainer Adapter
25	1.343-3	Plate

## Wiring diagram

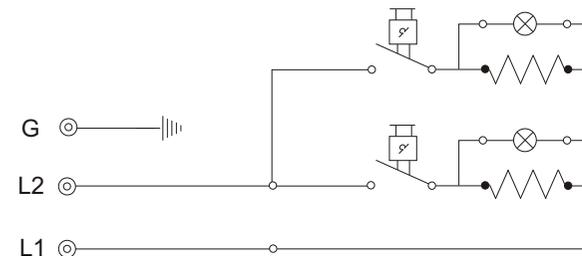

## Technical Data

GR3E-200001-A4	
Voltage (V)	220
Power (W)	3800
Amperage (A)	17.3
Weight (kg/lbs)	28.7/63.1
Dimensions W x H x D (cm/in)	64/25.2 x 36/14.2 x 48/18.9